

strut mounted headboard

-FIXING GUIDE-



Installing a strut-mounted headboard is a quick and easy DIY job. Follow these steps to have your headboard fitted securely and perfectly positioned behind your bed.

WHAT YOU'VE GOT

- **Headboard** pre-fitted with two wooden struts
- **Fixing bolts or screws**

WHAT YOU'LL NEED

- **Screwdriver**
- **A tape measure**
- **A pencil** (optional, for marking height)


TOP TIPS

- For heavier headboards, ask someone to hold it steady while you tighten the bolts.
- Don't over-tighten – just enough to hold the headboard firmly in place.
- Adjust the height before final tightening to get your preferred position above the mattress.

3 EASY TO FOLLOW fixing steps

1

LOCATE THE HEADBOARD SLOTS

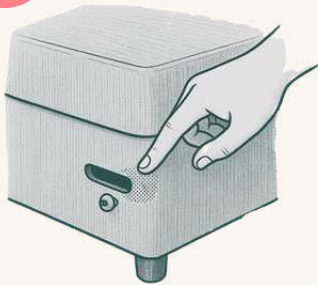


Look at the top of your divan base you'll find two small holes or slots designed for headboard struts.

If they're covered by fabric, feel for them and carefully pierce the material to reveal the fixing holes.

2

POSITION & ADJUST

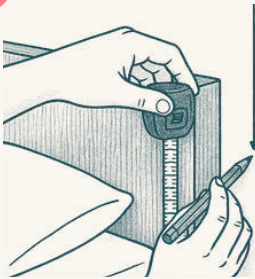


Slide the struts into the holes on your divan base. Adjust the height so the headboard sits comfortably just above your mattress.

You can make small adjustments later once everything is tightened.

3

SECURE & TIGHTEN

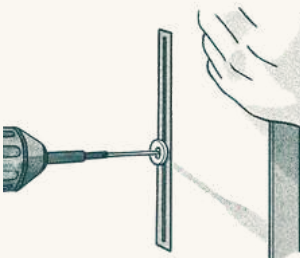

Insert the fixing bolts through the slots on the struts and into the holes in the bed base. Tighten them evenly using a screwdriver.

Once secure, step back and make sure the headboard is straight and level – then admire your handiwork!

If you have questions on fitting please call 01772 786 666,
or email us hello@oddmattress.co.uk