

# wall mounted headboard

## -FIXING GUIDE-

Installing your headboard with a split batten (also called a French cleat) is a simple and secure DIY task. Once fitted, it'll sit flush against your wall with no visible fixings and can be easily removed if needed.

### WHAT YOU'VE GOT

- **Headboard** with one half of the batten already fixed to the back
- **Wall batten** the matching half to be fitted to your wall
- **Screws and wall plugs** these may be supplied, depending on your wall type

### WHAT YOU'LL NEED

- **Drill and drill bit** suitable for your wall type
- **Spirit level**
- **Tape measure**
- **Pencil**
- **Wall plugs and screws** suitable for your wall (masonry, plasterboard, or stud)

### TOP TIPS

- Ensure the batten sits clear of any skirting or dado rails.
- For stud walls, fix directly into the timber studs or use heavy-duty plasterboard fixings.
- For masonry walls, use standard wall plugs and screws.
- Always double-check the headboard is level before tightening the screws.

## 4 EASY TO FOLLOW fixing steps

1

### CHOOSE YOUR HEIGHT




Hold your headboard against the wall to decide how high you'd like it to sit. Make a small pencil mark at the top of the headboard.

**TIP:** Keep your bed and mattress in place while doing this, it'll help you find the perfect height.

2


### MEASURE & MARK YOUR BATTEN POSITION

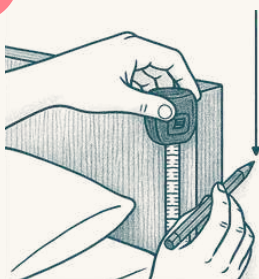

Measure the distance between the top of the headboard and the top edge of the wall batten fixed to its back. From the pencil mark you made earlier, measure down this same distance and draw a light line. This marks where the top of your wall batten will sit.

3


### FIX THE WALL BATTEN

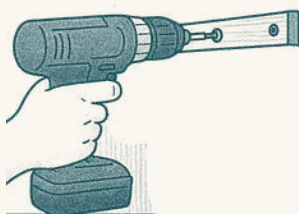

Hold the wall batten against this line, with the angled edge facing upwards. Use a spirit level to make sure it's straight. Mark your fixing points through the batten, drill your holes, and insert suitable wall plugs. Secure the batten firmly with screws.

4

### MOUNT YOUR HEADBOARD

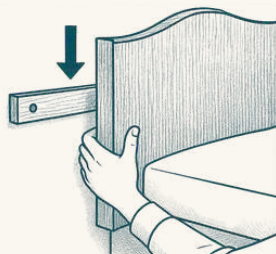

Lift the headboard and lower it onto the wall batten so the two halves interlock. It should drop neatly into place, sitting flush and secure against the wall.

**To remove** simply lift the headboard upwards to release it from the batten.

If you have questions on fitting please call 01772 786 666,  
or email us [hello@oddmattress.co.uk](mailto:hello@oddmattress.co.uk)